



**prompt**  
The pursuit of purity

MILKEASY  
MILKING MACHINE

# How do we keep it pure?

Prompt provides innovative solutions for an efficient dairy procurement supply chain. From farm management and milk collection to quality analysis and preservation, we have different equipment and software to ensure that the purity of milk is retained at every step.

Our unique offering, the MilkEasy Milking Machine helps eliminate the contamination that usually happens in the traditional milking process, thereby achieving the minimum bacterial count. Also, the machine milks the animals gently, which avoids any risk of injury to them.

## Our product in this pursuit – MilkEasy Milking Machine

DESIGNED FOR EFFICIENCY  
AND PERFORMANCE!

Now, maintain supreme hygiene while you milk your cattle fast. While you save time, you also retain the quality of milk and ensure comfort to the animal.




### FEATURES:

- Easy-to-move trolley with large heavy duty wheels
- Strongly built for tough conditions
- Single and double buckets available
- 25-30 litre stainless steel bucket
- Electric motor – Direct coupling with vacuum pump, having highest level of safety
- Low noise to avoid any discomfort to the cattle
- Easy-to-operate so that one person can deal with everything
- Long working life of machine
- Milk Tube is transparent, easy to clean and has food-grade, non-toxic quality standards
- Premium quality of clusters and liners used to ensure cattle comfort
- Interlocking to prevent injury to cattle



PRM 1

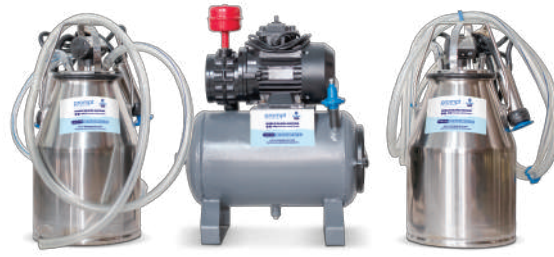

PRM Fixed



PRM 2

## TECHNICAL SPECIFICATIONS:

	MOBILE MILKING MACHINE		FIXED MILKING MACHINE
Model	PRM 1 (Single Bucket)	PRM 2 (Double Bucket)	PRM Fixed (2-6 Buckets)
Cattle per hour	10-12	20-24	20-24
Milking cup group number	1 set	2 sets	2 sets
Working vacuum	-40 to -50Kpa (adjustable)	-40 to -50Kpa (adjustable)	-40 to -50Kpa (adjustable)
Pulsation ratio	60:40	60:40	60:40
Pulsation time	60 times per minute	60 times per minute	60 times per minute
Vacuum pump power	0.55 KW	0.75 KW	0.75 / 1.1 KW
Vacuum pump capacity	200 LPM	240 LPM	240 / 400 LPM

## WHAT ARE ITS BENEFITS?

- Limits bacterial growth
- Better udder health
- Maximizes milk yield
- Retains milk quality
- Quick to set-up & start
- Designed to ensure animal comfort and cleaning
- Reduces dependency on skilled farm workers
- Much faster than milking by hand
- Highly efficient and easy to operate
- More time available for farm management

## MILKING MACHINE STARTER KIT INCLUDES:


Milk Tube Brush

Designed to remove milk traces from milk tubes



Milk Liner Brush

Designed to remove milk traces from milk liners





# prompt

The pursuit of purity

Our ideas and innovations are a part of the pursuit of maintaining the sanctity of milk so that the world's most ancient health drink can be appreciated as it truly is – untouched and unadulterated.



presence across  
22 states



presence across  
221+ districts



presence across  
50,000+ villages



650+  
team members



legacy of more than  
2 decades



2 patented  
products

## Optimise your farm with related products


### Farm 365 Animal Husbandry App

This technologically advanced app is a complete solution to your cattle management needs, which helps improve cattle breeding and feeding – resulting in increased milk yield and profitability.



### Animal Wearable

An intelligent, interconnected Animal Wearable tag which provides actionable insights to improve farmer's earnings through real-time monitoring of estrus and animal health.

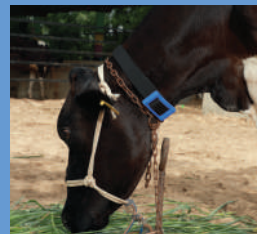

Prompt Equipments Pvt. Ltd.

3-B, Vardan Exclusive, Nr. Stadium Petrol Pump, Navrangpura,  
Ahmedabad – 380014, Gujarat, India

+91 7926565981/2/3 | [info@promptgroup.co.in](mailto:info@promptgroup.co.in) | [www.promptdairytech.com](http://www.promptdairytech.com)

Follow us on    